

# IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

## READ ALL INSTRUCTIONS BEFORE USING

### FOR HOUSEHOLD USE ONLY

**DANGER** — Any appliance is electrically live, even when the switch is off.

To reduce the risk of death or injury by electric shock:

1. Always unplug appliance from electrical outlet immediately after using (except when charging unit).
2. Do not place or store appliance where it could fall or be pulled into a tub or sink.
3. Do not place appliance in, or drop into water or other liquids.
4. Unplug this appliance before cleaning.

**WARNING** — To reduce the risk of burns, electric shock, fire, or injury to persons:

1. Except when charging, never leave a plugged-in appliance unattended.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction

concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

3. Use appliance only for its intended use as described in this manual. Use only attachments recommended by the manufacturer. Do not use an extension cord to operate the appliance.

4. **Never operate the appliance if it has a damaged cord or plug, is not working properly, has been dropped or damaged, or has been dropped into water. Return the appliance to a Conair Service Center for examination and repair.**

5. Keep the appliance cord away from heated surfaces.

6. Do not pull, twist or wrap the cord around the appliance.

7. Never drop or insert any object into any opening on the appliance.

8. Do not place the appliance on any surface while it is operating.

9. Do not use the appliance with a damaged or broken comb or with teeth missing from the blades, as injury may result. Before each use, make certain the blades are aligned properly and oiled.

10. Keep the air openings free of lint, hair, and similar objects.

11. Do not use the appliance outdoors or where aerosol (spray) products are being used or where oxygen is being administered.

12. This appliance is not a toy. Keep away from children.

13. **THIS PRODUCT IS FOR HOUSEHOLD USE ONLY.**

## FEDERAL COMMUNICATIONS COMMISSION NOTICE

### WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
1. This device may not cause harmful interference, and
  2. This device must accept any interference received, including interference that may cause undesirable operation.
- DATE OF ISSUE: 11/30/2021**

## SUPPLIER'S DECLARATION OF COMPLIANCE

**Brand:** GirlBomb  
**Model No.:** NPGBT02  
**Description:** Shaver/Trimmer  
**Responsible Party:** Conair LLC, 1 Cummings Point Road, Stamford, CT 06902 (203) 351-9000

**Standards:** FCC Part 15 Subpart B, ANSI C63.4-2014

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesirable operation.

**DATE OF ISSUE: 11/30/2021**

## SAVE THESE INSTRUCTIONS

### USER MANUAL

Before using the Class 2 Power Supply, read these instructions carefully.

**Use with adapter CA81**

**Rated input voltage:** 100–240V AC, 50/60Hz 0.2A

**Rated output:** 4.5V DC 1000mA

### CAUTION

1. Ensure jack is plugged into the trimmer unit before plugging the adapter into the outlet.
2. Do not operate any appliance that has a damaged output cord or housing.

3. Always unplug the unit before cleaning or when not in use.

4. This power unit is intended to be correctly oriented in a vertical or floor-mount position.

5. Be sure voltage is correct before plugging in. For connection to a power supply not in the U.S.A, use an attachment plug adapter of the proper configuration for power outlet. The adapter included automatically adjusts to the input voltage. **DO NOT USE WITH A VOLTAGE CONVERTER.**

### TRIMMER OPERATING PRECAUTIONS

This trimmer has a built-in rechargeable battery. Do not throw into fire, apply heat, or charge, use or leave in a high-temperature environment.

**CAUTION:** Any changes or modifications not expressly approved by Conair LLC, the manufacturer of this product and the party responsible for compliance, could void the user's authority to operate the equipment.

### TROUBLESHOOTING

If your rechargeable trimmer does not seem to be taking a charge, try the following troubleshooting steps before returning it for repair:

1. Be sure the electrical outlet is working by plugging in another appliance to test the outlet.
2. Make sure the electrical plug is not connected to a switch that turns power off when lights are turned off.
3. Make sure the adapter is inserted into the trimmer properly and all the connections are secure.

# OPERATING INSTRUCTIONS

## CHARGING

1. Before using the trimmer for the first time, charge continuously for 3 hours. Maximum battery capacity will be reached only after 3 charging and discharging cycles.

2. To charge the trimmer, first ensure the trimmer is switched off, then insert the small plug on the charging adapter into the hole on the bottom of the trimmer. Plug the adapter into any wall outlet (at the voltage listed on the label affixed to the adapter). Unplug adapter when not in use.

3. The adapter may become warm while charging. This is normal.

4. The red charging LED indicator light on the trimmer will flash when correctly connected. When it is fully charged, the red charging LED indicator light will stay red and stop flashing.

5. A full charge will supply 90 minutes of cordless runtime.

6. When the trimmer is running low on a charge, the LED indicator light will flash, warning you that there is approximately 10 minutes of battery use remaining.

7. To maintain optimum capacity of the rechargeable battery, it is highly recommended to fully discharge and then recharge the trimmer for 3 hours every 6 months.

**WARNING:** If the charging light suddenly starts to flash rapidly, the appliance is faulty. If this happens, please stop charging, remove the adapter from the outlet and contact our Customer Care Center at 1-800-3-CONAIR.

## TRIMMER CHARGING PRECAUTIONS

- Avoid charging the battery at temperatures below 41°F (5°C) or above 95°F (35°C).
- Avoid charging the battery in direct sunlight or near a radiating heat source.
- Even though the trimmer may not be used for an extended period of time, charge once a month to preserve battery life.
- The power cord cannot be replaced. If it is damaged, the DC adapter should be discarded.

## CORDED USE

To use the trimmer connected directly to a power source:

1. Ensure the trimmer is switched off.
2. Insert the small plug on the charging adapter into the hole on the bottom of the trimmer.
3. Plug the charging adapter into a suitable power source and switch on.

The red LED charging light will flash when the adapter is correctly inserted into the appliance and connected to an outlet.

 
**NOTE:** If the battery is weak and low on a charge, wait approximately 1 minute before switching the trimmer on.

## WET/DRY FEATURE


This device is water resistant. It may be exposed to splashing water in the shower, and can be rinsed clean under the faucet, but should never be completely submerged in water.

## INSTRUCTIONS FOR USE TO SWITCH TRIMMER & SHAVER HEAD ATTACHMENTS

Hold the power handle while turning the trimmer head counterclockwise until the ▼ mark is aligned properly with the ▲ mark. At this point, you should be able to easily lift the trimmer head from the handle. To use a new attachment head on the unit, properly install the head into position. Making sure the ▼ mark is aligned with the ▲ mark, turn clockwise until the ▼ and circle marks are aligned and lock into position (Fig. 1).

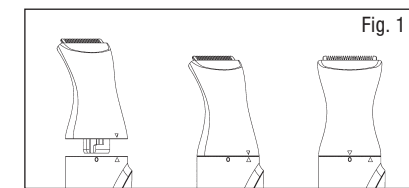

 Remove the foil head assembly from the shaver head by pushing on the two side buttons and pulling the foil away from the head (Fig. 2).

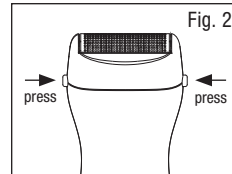


## GETTING STARTED

1. To use, press ON/OFF switch to ON.
2. After use, press ON/OFF switch to OFF.
3. Cord/cordless operation for total flexibility.
4. Japanese stainless steel blades for sharp and effortless cutting.

## TRIMMING

1. Start with the guide comb attached for first-time use.
2. Turn the unit on.
3. To fully remove hair or to outline the bikini area, use the trimmer without the attachment comb.
4. When removing hair, gently move the blades against the direction of growth.
5. To outline, place the blades perpendicular to the skin surface and apply the blades to the edge of the hair. Use the blades to create the desired outline.
6. For the cleanest finish, follow up with the foil shaver.
7. For cutting hair without completely removing it, attach the detail comb to the head. Place the comb on the cutting blades first, align the comb ribs with top surface of trimmer head housing and then snap down onto the back of the trimming head (Fig. 3).

 8. Snap off the comb guide to release from the trimmer head (Fig. 4).

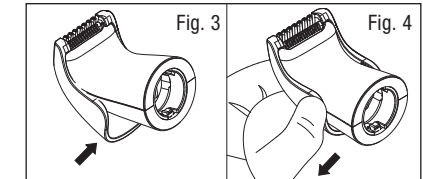

## TAKING CARE OF YOUR TRIMMER

### BLADE CARE

Because the trimmer blades are precision made for a very special use, they should always be handled with care. Rinse blades under water only, allow to air-dry and store the trimmer until the next use.

To promote the long life of the appliance, use your trimmer only for the purpose intended by the manufacturer.

## USING THE SHAVER HEAD ATTACHMENT

 
The shaver head attachment is designed to provide a clean, close shave. Take care with the foil as it is very sensitive and easily damaged. Always inspect it for damage before you use it. Never use a foil that is damaged, as this can result in injury. Make sure your skin is clean and dry before use. Do not use any lotions or oils before shaving.

## SHAVING

**NOTE: If you are switching to an electric or battery-operated shaver for the first time, it will take about 12 uses for your skin and hair to adjust to this new method of removing hair. Do not evaluate performance until you have allowed your skin and hair time to adjust.**

## HOW TO CLEAN YOUR SHAVER HEAD ATTACHMENT

1. Make sure unit is in the OFF position before cleaning.
2. Hold shaver head attachment and lift up from the back (Fig. 5), then press foil frame release buttons on each side and lift up (the cutter will now be in view). Be careful not to push on the foils. They are delicate and can easily be damaged.

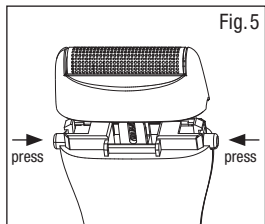

3. Rinse the shaving foil under running water or in a sink. Do not use hot water. Use only warm or cold water.

4. After rinsing, allow the shaving foil to air-dry.

5. If the body of the power handle becomes dirty, wipe off with a damp cloth and mild detergent or soap. Never use thinners, other solvents, or any harsh cleaners.



To maintain the best cutting performance, be sure to replace the foil head and cutter after every 6 months of regular use. Contact Conair Consumer Service at 1-800-3-CONAIR to order the replacement parts.

## BATTERY SAFETY INFORMATION

  1. This device requires one 14500 lithium-ion battery.
2. Battery is not to be removed by the consumer unless instructed by the manufacturer.
3. Since the battery is sensitive to high temperatures, when storing the device, keep it in a cool, dry place.
4. Never put batteries into a fire.
5. Switch off device after use.
6. Keep batteries away from children, especially the batteries that are small enough to ingest.
7. If a battery is ingested, seek immediate medical help.
8. Never open, crush, puncture or disassemble batteries.
9. Dispose of batteries according to any state and local regulations.
10. Do not dispose of rechargeable batteries as solid waste.

## BATTERY DISPOSAL

This appliance contains a lithium-ion battery. To protect the environment, this appliance and its battery must be disposed of safely. At the end of its life, please take this appliance to a recycling center, where the internal rechargeable battery should be removed by a professional and recycled separately. For more information about the recycling of electrical and battery-operated appliances, please contact your local recycling or environmental protection office or your household waste disposal service. For specific questions regarding the replacement of batteries in this product, please contact our Conair Customer Care Line at 1-800-3-CONAIR.

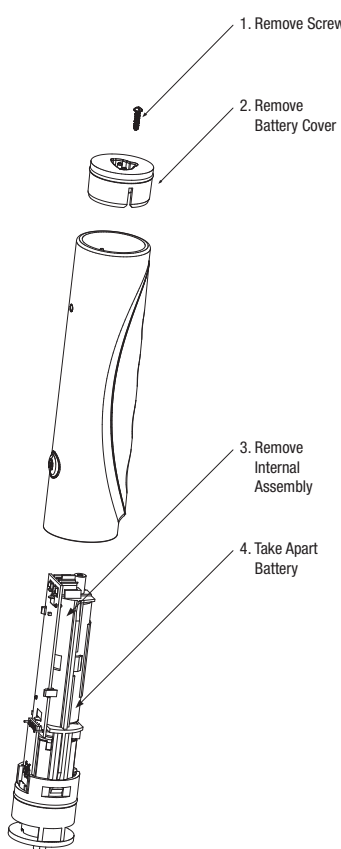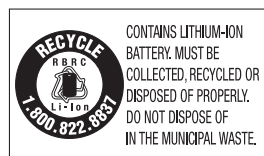

## NPGBT02 BIKINIBOMB TRIM & SHAVE

Lithium-Ion Rechargeable Cord/Cordless Trimmer with Japanese Stainless Steel Blades

 


Hypoallergenic Foil Shaver



**WARNING: IF YOU THINK THE POWER IS OFF WHEN THE SWITCH IS OFF, YOU'RE WRONG.**

**KEEP AWAY FROM WATER**

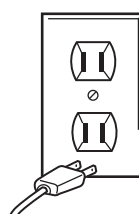

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

**ALWAYS UNPLUG SMALL APPLIANCES**

## LIMITED TWO-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed on back, together with your purchase receipt. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

**ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.**

Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

**IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.**

Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

girlbomb™  
power in your palm.™



**BIKINIBOMB**  
Trim & Shave



**Instruction Booklet**  
For your safety and continued enjoyment of this product, always read the instruction booklet carefully before using.

**CONAIR**

Model NPGBT02

For info on any Conair product, call 1-800-3-CONAIR or visit us on the web at [www.conair.com](http://www.conair.com)

Please register this product at [www.conair.com/registration](http://www.conair.com/registration)

©2022 Conair LLC

Service Center  
7475 North Glen Harbor Blvd.  
Glendale, AZ 85307

21NP081578

IB-17495



## MEDIDAS DE SEGURIDAD IMPORTANTES

Al usar aparatos eléctricos, especialmente en presencia de niños, siempre se deben tomar precauciones básicas de seguridad, entre ellas las siguientes:

### LEA TODAS LAS INSTRUCCIONES ANTES DEL USO PARA USO DOMÉSTICO SOLAMENTE

### PELIGRO —

Cualquier aparato enchufado permanece en tensión, aunque esté apagado.

Para reducir el riesgo de electrocución o lesiones por descarga eléctrica:

1. **Siempre desenchufe el aparato inmediatamente después del uso (excepto durante la carga).**

2. No coloque ni guarde el aparato don pueda caerse o ser empujado a una bañera o un lavabo.

3. No coloque el aparato ni lo deje caer al ag u otro líquido

4. Desenchufe el aparato antes de limpiarl

### ADVERTENCIA —

Para reducir el riesgo de quemaduras, descarga eléctrica, incendio o lesiones personales:

1. **Nunca descuide/deje el aparato sin vigilancia mientras esté conectado, excepto durante la carga.**

2. Los niños o las personas que carezcan de experiencia o de los conocimientos necesarios para manipular el aparato, o aquellas cuyas capacidades físicas, sensoriales o mentales estén limitadas, no deben usar el aparato sin la supervisión o la dirección de una persona responsable por su seguridad. No permita que los niños jueguen con este aparato.

3. Use este producto solo para el uso previs y como se describe en este manual. Solo use accesorios recomendados por el fabricante. No use un cable alargador/de extensión con este aparato.

4. **No use este aparato si el cable o el enchufe están dañados, si no funciona correctamente, si está dañado, o después de una caída/caída al agua; devuélvalo a un centro de servicio autorizado para su revisión y reparación.**

5. Mantenga el cable lejos de las superfici calientes.

6. No jale, retuerza ni enrolle el cable alrededor del aparato.

7. Nunca deje caer ni inserte ningún objeto en ninguna de las aberturas.

8. No coloque el aparato sobre ningu superficie durante el funcionamiento.

9. Para evitar las lesiones, no use este apara con guías o cuchillas rotas o dañadas, o si les faltan dientes a las cuchillas. Compruebe que las cuchillas están debidamente alineadas y lubricadas antes de cada uso.

10. Mantenga los orificios de ventilación lib de pelusas, cabellos y elementos similares.

11. No lo use en exteriores, ni lo h funcionar donde se estén usando productos en aerosol (spray) o donde se esté administrando oxígeno.

12. Este aparato no es un juguete; manténg fuera del alcance de los niños.

13. **PARA USO DOMÉSTICO SOLAMENTE.**

### AVISO DE LA COMISIÓN FEDERAL DE COMUNICACIONES (FCC)

**ADVERTENCIA:** Se advierte que las modificaciones no aprobadas expresamente por la autoridad competente en materia de conformidad podrían rescindir el permiso del usuario para operar el equipo.

**NOTA:** Este equipo ha sido probado y se ha determinado que cumple con los límites de un dispositivo digital de Clase B, según la Sección 15 de la Normativa FCC.

Estos límites están diseñados para proporcionar una protección razonable contra las interferencias perjudiciales para las instalaciones residencial. Este equipo genera, usa y puede irradiar energía de radiofrecuencia (RF) y, si no ha sido instalado o usado conforme a las instrucciones, pued ocasionar interferencias perjudiciales para las comunicaciones por radio. No obstante, no hay garantía de que aquellas interferencias no ocurran en una instalacón particular. Si este equipo produce alguna interferencia perjudicial en la recepción de radio o televisión, lo que podrá determinarse encendiendo y apagando el equipo, se recomienda tratar de corregir la interferencia, adoptando una o más de las siguientes medidas:

- Reorientar o reubicar la antena receptora.

• Aumentar la distancia entre el equipo y e receptor.

• Conectar el equipo a un circuito distinto a que esté conectado el receptor.

• Consultar con el distribuidor o un técnico especializado en radio/TV.

#### DECLARACIÓN DE CONFORMIDAD DEL PROVEEDOR

Marca: GirlBomb

Modelo: NPGBT02

Descripción: Afeitadora/Recortadora

Parte responsable: Conair LLC, 1 Cummings Point Road, Stamford, CT 06902 (203) 351

Normas: Normas de la FCC, Sección 15, subsección B, ANSI C63.4-2014

Este artefacto cumple con la Sección 15 de la Normativa FCC. Su funcionamiento está sujeto a las dos condiciones siguientes:

(1) este artefacto no debe causar ning interferencia perjudicial, y (2) este artefacto debe aceptar cualquier interferencia recibida, incluso aquellas que puedan causar un funcionamiento no deseado.

**FECHA DE PUBLICACIÓN: 30/11/2021**

## GUARDE ESTAS INSTRUCCIONES

Lea atentamente las instrucciones antes de usar el adaptador de clase 2.

**Use solamente el adaptador provisto (CA81). Tensión de entrada nominal:** 100–240 V AC; 50/60 Hz; 0.2 A

**RESOLUCIÓN DE PROBLEMAS**

Si el aparato no agarra carga, siga los pasos siguientes antes de devolverlo a un centro de servicio:

**Tensión de salida nominal:** 4.5 V DC; 1000 mA

#### RECORADORA/AFEITADORA BIKINIBOMB NPGBT02

Recortadora recargable con/sin cable con batería de iones de litio y cuchilla de acero inoxidable japonés



1. Conecte otro aparato a la toma de corrien para comprobar que la toma de corriente está funcionando.

2. Compruebe que la toma de corriente está conectada a un interruptor que corta el suministro eléctrico cuando la luz está apagada.

3. Compruebe que el adaptador es debidamente conectado al aparato y que todas las conexiones están seguras.

## INSTRUCCIONES DE OPERACIÓN

#### INSTRUCCIONES DE CARGA

1. **Cargue el aparato continuamente p 3 horas antes del primer uso. La batería recargable alcanzará su capacidad máxima después de 3 ciclos de carga/descarga.**

2. Compruebe que el botón de encendid apagado está en la posición de apagado e introduzca el enchufe pequeño del adaptador de carga en el agujero en la parte de abajo del aparato. Enchufe el adaptador (compruebe el voltaje indicado en la etiqueta del adaptador antes de enchufarlo) en la toma de corriente. Desenchufe el adaptador cuando no esté en uso.

3. Puede que el adaptador se calien ligeramente durante la carga; esto es normal.

4. Durante la carga, la luz de carga ro parpadeará, lo que indica que el aparato está debidamente conectado y está cargando. Una vez cargada la batería, el indicador luminoso permanecerá encendido sin parpadear.

5. Una carga completa proporcionará u autonomía de aprox. 90 minutos.

6. Si el indicador LED empieza a parpadear durante el uso, esto indica que la batería está baja y que quedan aprox. 10 minutos de uso.

7. Para mantener la capacidad óptima de batería recargable, es muy recomendable dejar que el aparato se descargue completamente, y luego cargarlo por 3 horas cada 6 meses.

**ADVERTENCIA:** Si de repente la luz de carga empieza a parpadear rápidamente, esto significa que el aparato está defectuoso. En caso de que esto suceda, desenchufe el adaptador de la toma de corriente y llame a nuestro centro de atención al cliente, al 1-800-3-CONAIR, para más información.

#### PRECAUCIONES DE CARGA

• Evite cargar el aparato en temperatura inferiores a 41 °F (5 °C) o superiores a 95 °F (35 °C).

• Evite cargar el aparato en la luz directa de sol o cerca de una fuente de calor.

• Le aconsejamos que cargue el aparato un vez al mes, aunque no tenga previsto usarlo; esto ayudará a conservar la vida de la batería recargable.

• El cable de alimentación no puede se reemplazado. Si está dañado, tire el adaptador.

#### USO CON CABLE

Para usar el aparato con cable:

1. Compruebe que el aparato está apagado (“OFF”).

2. Introduzca en enchufe pequeño d adaptador de carga en el agujero en la parte de abajo del aparato.

3. Enchufe el adaptador de carga en una to de corriente adecuada y encienda el aparato; la luz de carga LED roja empezará a parpadear, lo que indica que el aparato está debidamente conectado.

**NOTA:** Si la batería está baja, espere por aprox. 1 minuto antes de encender el aparato.

#### USO EN SECO/MOJADO

 
 
Este aparato es resistente al agua. Esto significa que lo puede usar en la ducha y enjuagarlo en agua corriente, pero no debe ser sumergido completamente en agua.

## INSTRUCCIONES DE USO

#### CÓMO CAMBIAR LOS CABEZALES

Sostenga el mango del aparato firmemente y gire el cabezal en sentido antihorario hasta que las flechas ▼ y ▲ queden alineadas. Retire el cabezal, jalándolo hacia arriba. Instale el cabezal deseado, alineando las flechas ▼ y ▲. Para sujetar el cabezal, gírelo en sentido horario hasta que la flecha ▼ y el círculo queden alineados (Fig. 1).

Presione los botones de liberación de la hoja (situados en los costados del cabezal) y jale la hoja hacia arriba para retirarla (Fig. 2).

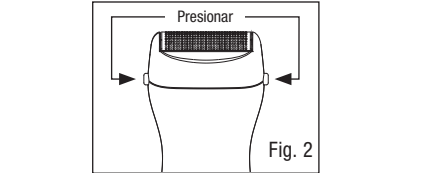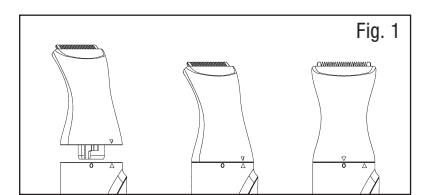

## FUNCIONAMIENTO BÁSICO

1. Para encender el aparato, ponga el botón encendido/apagado en “ON”.

2. Para apagar el aparato, ponga el botón encendido/apagado en “OFF”.

3. Funcionamiento con o sin cable para una máxima flexibilidad.

4. Cuchillas de acero inoxidable japonés pa un corte preciso y sin esfuerzo.

### CÓMO USAR LA RECORTADORA DE BIKINI

1. Si es la primera vez que usa el aparat instale la guía sobre la recortadora.

2. Encienda el aparat

3. Para rasurar los vellos o darle forma al ár del bikini, use el cabezal sin la guía.

 
4. Mueva el cabezal suavemente en direcci contraria al crecimiento del vello.

5. Para dar forma al área del bikini, sosten el aparato de manera que las cuchillas estén perpendiculares a la piel y presione hacia abajo, creando el contorno deseado poco a poco.

6. Para conseguir un acabado limpio, afeite zona con el cabezal de afeitado.

7. Para acortar los vellos sin afeitarlos, insta la guía sobre el cabezal. Deslice la guía por encima de las cuchillas, alineando los dientes de la guía con los dientes de las cuchillas, y presione la parte trasera para sujetarla (Fig. 3).

8. Para retirar la guía de las cuchillas, jale parte trasera de la guía (Fig. 4).

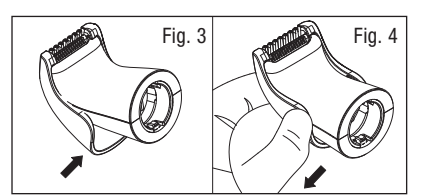

## MANTENIMIENTO DE SU RECORTADORA

#### CUIDADO DE LAS CUCHILLAS

Las cuchillas de su recortadora han sido diseñadas con precisión para un uso específico y deben recibir un cuidado muy especial. Enjuáguelas en agua corriente y permita que se sequen al aire antes de guardar el aparato.

Para seguir disfrutando de este aparato por mucho tiempo, úselo solamente para el uso previsto.

Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted.

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

Algunos Estados no permiten limitaciones en la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

**CONAIR NO SERÁ RESPONSABLE, EN NINGÚN CASO, POR NINGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA.**



**Manual de instrucciones**  
Para su seguridad y para disfrutar plenamente de este producto, siempre lea atentamente las instrucciones antes del uso.

**CONAIR®**