

Congratulations on the purchase of your new twin-foil wet/dry shaver for women. For maximum satisfaction when using this quality product, please take a minute to read the following operating and care instructions. Thank you for choosing Conair, the #1 brand in personal care appliances.

SAVE THESE INSTRUCTIONS WARNING


1. Women whose skin is sensitive to cosmetics or easily irritated by shaving, or who suffer from a skin allergy, should test one section of the leg or arm before using the shaver.
2. **The foils are thin and precisely finished pieces. Do not press hard against the foils or drop foils. A warped or distorted foil will produce poor shaving results. Also, a damaged foil may cause skin injury. A damaged foil should be replaced immediately.**
3. When cleaning, use cold or warm water. Do not use hot water, seawater, or cleaners, as they can cause damage to the waterproof seals.
4. Do not leave the entire unit submerged in water for a long period of time.
5. To prevent possible damage to the foils and the cutter, women who use underarm deodorant must thoroughly clean and air-dry the foils and cutter after each use. Failure to do this may result in corrosion of the inner blades.
6. This appliance is not a toy. Keep away from children.

REPLACING THE FOIL FRAME & CUTTERS


Replace the foil frame when you find you have to push harder on the shaver to get a close shave, or if you have to go over your leg area more often to get a smooth result. It is also time to replace the foils if you experience skin irritation. Replacement time will depend on how often you use your shaver and how quickly your hair grows.

Caution: Never replace the cutters without replacing the foils as well.

1. Remove the foil frame (see FIG. 2).

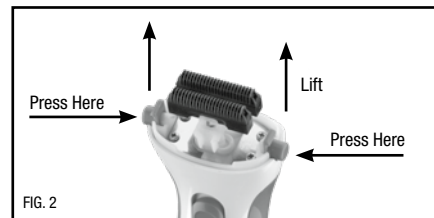

2. Push one side of the inner blade to unlock it and take out (see FIG. 3).

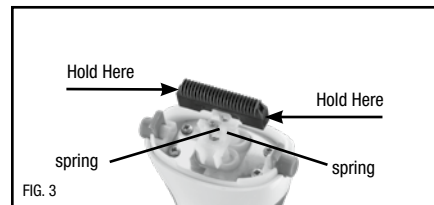

Caution: Make sure you do not lose the little spring under the cutter, as it will be needed for the new cutter (see FIG. 4).

OPERATING INSTRUCTIONS IMPORTANT

This shaver has been engineered to give you a clean, close, smooth shave. It requires 2 AAA batteries (not included). We recommend using longer lasting alkaline batteries in your shaver. If you are not going to use your shaver for a long period of time or if the batteries are dead, remove or replace the batteries from the unit.

Use your shaver exclusively for three to four weeks so that your legs and underarms adjust to the shaver. At first, your shave might not be as close as you expect. However, this is normal. It takes time for your skin and hair to adjust to the new procedure and for you to learn how to effectively use the shaver.

Caution: Most blade users will push too hard and therefore not get a satisfactory shave. You must press gently so the hair can get into the holes of the foils. Pressing too hard makes the hair flat. Please be patient; use your shaver 10 to 12 times before you judge its performance.

FOR HOUSEHOLD USE ONLY

OPERATING INSTRUCTIONS

1. Remove the battery compartment cover by pushing in and down toward the bottom of the shaver.
2. Align the 2 AAA batteries with the positive and negative positions indicated inside the battery compartment. Being careful not to bend the clips, insert the negative end of each battery



3. Hold the new inner blades firmly on the sides and guide them gently into the inner blade mount, one side at a time, until they lock into place.
4. Press firmly until the unit snaps into place.
5. Replace the foil frame (see FIG. 5).



REPLACING THE POP-UP TRIMMER ASSEMBLY

Note: We do not recommend replacing the trimmer assembly yourself. Take or send the shaver to a Conair Service Center, because this requires a special tool for replacement. For most users, these trimmers will stay sharp for as long as you own your shaver.

first so it will slip easily into place.

3. Return the battery cover to its original position by pushing it in and up until you hear a small click as it locks into place.
4. To use your shaver, remove the transparent cover and push ON/OFF switch upwards to the ON position.
5. After you finish using your shaver, push down on the ON/OFF switch to turn the shaver off.
6. Ensure the batteries are installed correctly with regard to polarity (+ and -).
7. Remove the batteries if they are no longer functional or if the shaver is left unused for an extended period of time.
8. Clean the battery contacts and also those of the device prior to battery installation.
9. Remove used batteries promptly.
10. Always purchase the correct size and grade of battery most suitable for the intended use.
11. Replace all batteries of a set at the same time.
12. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel cadmium or nickel metal hydride) batteries.

CAUTION

Do not immerse any part of the unit in water or other liquid.

The outer foils and cutters are delicate and must be handled very carefully.

BEFORE SHAVING

1. Before wet shaving, you may wish to prepare your legs and underarms with shaving cream or soap. If a soapy lather is applied to the skin, the shaver will glide smoothly over the skin and

clean away oil residue, while at the same time removing hair. **Caution: Do not use shaving gels, as these products can clog your shaver foils.**

2. When dry shaving, be certain that your skin is clean. If you have sensitive skin, you may want to apply talcum powder before and after you shave.

3. Clean your shaver after each use. This will ensure the best performance. (Please refer to "How to Clean Your Shaver" section for further instructions.)

INSTRUCTIONS FOR USE

1. Slide the main switch up to the ON position.
2. After each shave, switch the unit off and clean shaver head.

SHAVING YOUR LEGS/BIKINI AREA

NOTE: Pushing the shaver against the skin too hard will not allow the hairs to enter the foils and be cut. Experience will help you determine just the right pressure to use to maximize performance.



1. Prepare your legs for wet or dry shaving.
2. Turn shaver on.
3. Shave with smooth, steady strokes up and down your skin.
4. Keep the full shaving head in contact with your skin.
5. For best results, shave against the direction of hair growth.
6. The shaver also has a bikini pop-up trimmer for your complete shaving needs.
7. When you finish shaving, turn the shaver off.

Important: After several uses, you will be able to determine the optimum shaving method for your legs and bikini area.



SHAVING YOUR UNDERARMS

1. Prepare your underarms for wet or dry shaving. (Be sure that your skin is clean and free of deodorant.)
2. Turn the shaver on.
3. Lift your arm until the skin under the arm stretches slightly.
4. Use the trimmer portion first to remove any long hair, stroking trimmer against the direction of hair growth.
5. Hold the shaver so that it is in full contact

For shaving tips and information on Conair appliances, call 1-800-3-CONAIR or visit us on the web at www.conair.com

REPLACEMENT PARTS:

This shaver uses the following replacement parts, which can be ordered directly from Conair by calling customer service at 1-800-3-CONAIR.

CSP21 Replacement Foil and Cutter

LIMITED TWO-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed on back, together with your purchase receipt. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.


IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

- with your skin, and shave with gentle strokes.
 6. It is important to press lightly. Pressing too hard may lead to skin irritation.
 7. When finished shaving, turn the shaver off.
- Important:** After several uses, you will be able to determine the optimum shaving method for your underarms.

HOW TO CLEAN YOUR SHAVER

1. Make sure unit is in the OFF position before cleaning your shaver.
2. Hold shaver head and lift up from the back, then press foil frame release buttons on each side and lift up (the cutter is now in view). Be careful not to push on the foils. They are delicate and can easily be damaged. (FIG. 1)

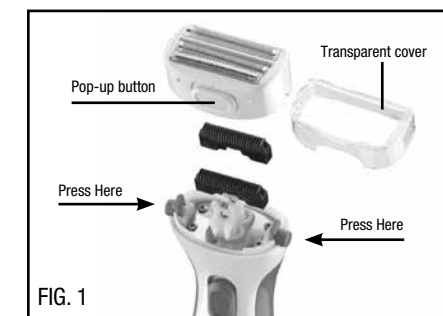

3. Rinse the shaver cutter and foil frame under running water or in a sink. Do not use hot water. Use only warm or cold water.

4. After rinsing, allow the foil frame and cutters to air-dry before closing foil frame and shaver head. Replace shaver head back onto the shaver until it clicks into place. Wipe the surface of the main unit with a dry towel. Do not dry the foil area. Let the shaving head air-dry.

5. The cutters can also be cleaned with a cleaning brush.
6. If the body of the shaver becomes dirty, wipe off with a damp cloth and mild detergent or soap. Never use thinners, other solvents, or any harsh cleaners.
7. Once dried, carefully place the protective cap on.

CAUTION

1. When shaking off excess water, hold the main unit firmly to prevent releasing the head assembly or dropping the unit.
2. Do not use a dryer or heater to dry the shaver. This may result in malfunction or damage to the shaver.

NOTE: At the end of the batteries useful life, under various state and local laws, it may be illegal to dispose of these batteries into the municipal waste stream. Check with your local solid waste officials for details on recycling options or proper disposal in your area.

Twin Foil SHAVER



Please register this product at www.conair.com/registration

Service Center

©2021 Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307
stock.image

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

CONAIR
MODEL LWD1RN

Le felicitamos por su compra de esta afeitadora de doble hoja para afeitado en húmedo/seco. Para su máxima satisfacción y para conseguir resultados óptimos con este producto de calidad, siempre lea las instrucciones de uso y mantenimiento que se encuentran a continuación. Gracias por haber elegido a Conair, la marca n.º 1 en aparatos de cuidado personal.

GUARDE ESTAS INSTRUCCIONES ADVERTENCIA

1. Si su piel es sensible a los productos cosméticos, se irrita fácilmente cuando se afeita o padece de alergia, pruebe el aparato en una pequeña sección del brazo o de la pierna antes del primer uso.
2. **Las hojas de afeitar son delgadas y precisas. No las apriete mucho contra la piel, ni las deje caer. Una hoja dañada o deformada impedirá el buen funcionamiento del aparato, y puede causar heridas. Reemplace las hojas defectuosas inmediatamente.**
3. Limpie el cabezal en agua fría o tibia solamente.
- No use agua caliente, agua salina o limpiadores; esto puede dañar los sellos de impermeabilidad del cabezal.
4. No sumerja el aparato en agua por un tiempo prolongado.
5. Si usa desodorante, lave cuidadosamente y deje secar las hojas y las cuchillas internas al aire después de cada uso. Si no lo hace, las cuchillas internas se pueden oxidar.

disolventes, solventes o limpiadores fuertes.

7. Una vez seco, vuelva a colocar la cubierta protectora sobre el cabezal.

PRECAUCIÓN

1. Si tiene que sacudir la unidad para eliminar el exceso de agua, sosténgala firmemente para no dejarla caer ni desarmar el cabezal.
2. No use un secador ni un calentador para secar la unidad; esto puede dañarlo o impedir su buen funcionamiento.

NOTA: Dependiendo de las normas regionales o locales vigentes, puede que sea ilegal tirar las pilas/baterías con el resto de la basura al final de su vida útil. Compruebe con las autoridades locales las opciones de reciclaje disponibles en su lugar de residencia.

6. Este aparato no es un juguete; manténgalo fuera del alcance de los niños.

INSTRUCCIONES DE OPERACIÓN IMPORTANTE

Este aparato ha sido diseñado para proporcionar un afeitado al ras suave y preciso. Requiere 2 pilas AAA (no incluidas). Le aconsejamos que use pilas alcalinas, las cuales son más duraderas. Retire las pilas las pilas gastadas, o si no va a usar la unidad por un largo período de tiempo.

Durante tres a cuatro semanas, use exclusivamente esta afeitadora para afeitar sus piernas/axilas. Puede que sus primeros intentos no sean perfectos; esto es normal. La piel y los vellos necesitan tiempo para acostumbrarse a una nueva técnica de afeitado.


Precaución: Muchas personas presionan demasiado las hojas contra la piel y, por lo tanto, no obtienen resultados satisfactorios. Se debe presionar suavemente, para dejar que los vellos entren en los orificios en las hojas; presionar demasiado aplasta los vellos. Sea paciente; use el aparato 10 a 12 veces antes de evaluar su rendimiento.

CÓMO REEMPLAZAR LAS HOJAS Y LAS CUCHILLAS INTERNAS


Si siente que debe hacer fuerza para afeitarse o si debe pasar la afeitadora en la misma zona varias veces para conseguir un resultado suave, cambie las cuchillas internas. Asimismo, cambie las hojas si nota que irritan la piel. La frecuencia de reemplazo dependerá de la frecuencia de uso del aparato y de la velocidad de crecimiento del vello.

Precaución: Siempre reemplace las hojas y las cuchillas internas al mismo tiempo.

1. Quite el cabezal (FIG. 2).

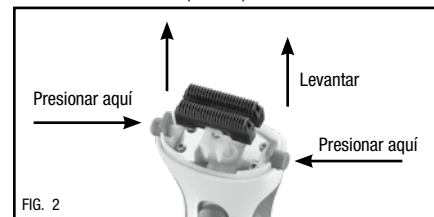

2. Presione el costado de las cuchillas internas para liberarlas y sacarlas (FIG. 3).

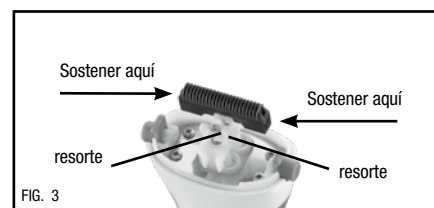

Precaución: Tenga cuidado de no perder el pequeño resorte situado debajo de las cuchillas internas; lo necesitará para instalar las nuevas cuchillas internas (FIG. 4).

PARA USO DOMÉSTICO SOLAMENTE

INSTRUCCIONES DE OPERACIÓN

1. Presione y deslice la tapa del compartimiento de las pilas hacia abajo para abrirlo.
2. Instale 2 pilas AAA, respetando los signos de polaridad indicados en el compartimiento de las pilas. Introduzca el polo negativo de cada pila primero, teniendo cuidado de no doblar las patas de contacto.
3. Cierre la tapa del compartimiento de las pilas, empujando hacia dentro y hacia arriba hasta que haga clic y se bloquee en su lugar.
4. Para usar el aparato, quite la tapa transparente y deslice el botón de encendido/apagado hacia arriba ("ON").
5. Para apagar el aparato, deslice el botón de encendido/apagado hacia abajo ("OFF").
6. Siempre respete los signos de polaridad (+/-) al instalar las pilas.
7. Retire las pilas las pilas gastadas/agotadas, o si no va a usar la unidad por un largo período de tiempo.
8. Limpie los contactos del aparato y los de las pilas antes de instalarlas.
9. Retire las pilas gastadas/agotadas sin demora.
10. No use pilas que no sean del tamaño ni de la potencia indicados para uso con este aparato.
11. Cambie todas las pilas al mismo tiempo.
12. No junte pilas nuevas con pilas usadas. No junte pilas alcalinas con pilas regulares (carbono-zinc) o pilas/baterías recargables (NiCd o Ni-MH).



3. Sostenga firmemente las cuchillas internas por los costados e insértelas suavemente en el soporte interno, un lado tras otro, hasta que encajen

4. Presione firmemente hasta que la unidad encaje.

5. Vuelva a instalar el cabezal (FIG. 5).



CAMBIO DE LA CUCHILLA RECORTADORA DESPLEGABLE

Nota: No le aconsejamos que intente reemplazar la cuchilla recortadora integrada/desplegable. Se necesita una herramienta especial para hacer esto. Si la cuchilla está dañada o no corta, devuelva el aparato a un centro de servicio autorizado. Sin embargo, la cuchilla ha sido diseñada para durar tanto tiempo como la unidad, y es probable que nunca la tenga que reemplazar durante la vida útil de la afeitadora.

PRECAUCIÓN

No sumerja ninguna pieza del aparato en agua u otro líquido.

Las hojas de afeitar y las cuchillas internas son delicadas y deben manipularse con mucho cuidado.

ANTES DEL AFEITADO

1. Es recomendable aplicar crema de afeitar o jabón en sus piernas y axilas antes de afeitarse en húmedo; esto facilitará el afeitado y eliminará los residuos de aceite de la piel al mismo tiempo que los vellos. **Precaución: NO use gel de afeitar, ya que los geles pueden obstruir las hojas.**
2. Antes del afeitado en seco, cerciórese de que la piel está limpia. Si su piel es sensible, puede aplicar talco antes y después del afeitado si desea.
3. Limpie la afeitadora después de cada uso; esto asegurará un rendimiento óptimo. Para más información, véase la sección "Instrucciones de limpieza".

INSTRUCCIONES DE USO

1. Para encender el aparato, ponga el botón de encendido/apagado en la posición de encendido ("ON").
2. Después de cada uso, apague la unidad y limpie el cabezal de afeitado.

CÓMO AFEITAR SUS PIERNAS/INGLES

NOTA: Presionar las hojas demasiado contra la piel aplasta los vellos e impide que entren en las hojas para ser cortados. La experiencia le ayudará a determinar exactamente cuánta presión aplicar para obtener resultados óptimos.



1. Prepare la piel para el tipo de afeitado deseado, en húmedo o en seco.
2. Encienda la unidad.
3. Mueva la máquina suavemente contra la piel, hacia arriba y abajo.
4. Siempre mantenga el cabezal en pleno contacto con la piel.
5. Para conseguir resultados óptimos, afeítese en dirección contraria al crecimiento del vello.
6. La máquina de afeitar también cuenta con una cuchilla recortadora desplegable para acortar el vello largo.
7. Después de terminar, apague el aparato.

Importante: Necesitará hacer varios intentos hasta encontrar la mejor manera de afeitar sus piernas/ingles.

Para conseguir consejos de afeitado o más información sobre los productos Conair®, llame al 1-800-3-CONAIR o visítenos en www.conair.com

REPUESTOS

Para pedir repuestos (véase la lista de las piezas disponibles a continuación), llame al 1-800-3-CONAIR.

Hojas y cuchillas internas (modelo CSP21)




CÓMO AFEITAR SUS AXILAS

1. Prepare la piel para el tipo de afeitado deseado, en húmedo o en seco. Cerciórese de que la piel está limpia, seca y libre de desodorante.
2. Encienda la unidad.
3. Levante el brazo para estirar ligeramente la piel.
4. Si el vello es largo, acórtelo con la cuchilla recortadora integrada, pasando la máquina en dirección contraria al crecimiento del vello.
5. Mantenga el cabezal en pleno contacto con la piel y afeite los vellos con movimientos suaves.
6. Es importante que presione ligeramente; hacer mucha presión puede causar irritación de la piel.
7. Después de terminar, apague la unidad.

Importante: Necesitará hacer varios intentos para determinar el método óptimo para afeitar sus axilas.

INSTRUCCIONES DE LIMPIEZA

1. Cerciórese de que la unidad está apagada (posición "OFF").
2. Sosteniendo firmemente la unidad, oprima los botones de liberación situados en ambos lados del cabezal y levante este; las cuchillas internas quedarán al descubierto. Tenga cuidado de no presionar las hojas; son delicadas y pueden dañarse fácilmente. (FIG. 1)

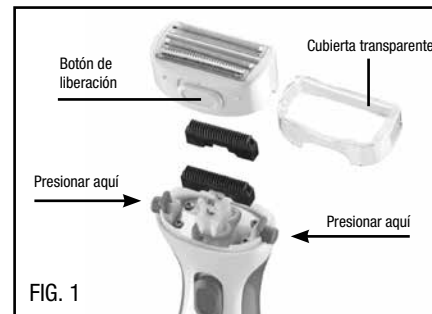

3. Enjuague las cuchillas internas y las hojas en agua corriente. No use agua caliente; use solamente agua tibia o fría.

4. Después de enjuagar las cuchillas y las hojas, permita que se sequen al aire antes de volver a ensamblar el cabezal. Una vez seco, vuelva a instalar el cabezal, presionando hasta que haga clic y encaje en su lugar. Seque la carcasa del aparato con una toalla seca. No seque el área de la hoja; permita que el cabezal se seque al aire.

5. Si desea, use un pequeño cepillo para limpiar las cuchillas internas.

6. Si la carcasa del aparato está sucia, límpiela con un paño ligeramente humedecido con agua jabonosa o detergente suave. Nunca use

Afeitadora de DOBLE HOJA



Para su seguridad y para disfrutar plenamente de este producto, siempre lea cuidadosamente las instrucciones antes del uso.

CONAIR
MODELO LWD1RN

Para registrar su producto, visítenos en: www.conair.com/registration

Centro de servicio
©2021 Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307
Fotografía de banco de imágenes